

TRACEABLE® STICK™ THERMOMETER INSTRUCTIONS

 
INSTALLATION INSTRUCTIONS

- 1) Probe sensor: Place the submersible probe inside the tank and press the suction cup against the inner wall. Choose a position which is less affected by light or plant for more reliable readout.
- 2) Unit: Remove the protective paper of the double-sided tape and press the unit against any clean surface for mounting.



Temperature as detected by built-in sensor
(i.e. room temp.)


Temperature as detected by the probe sensor
(i.e. water temp.)

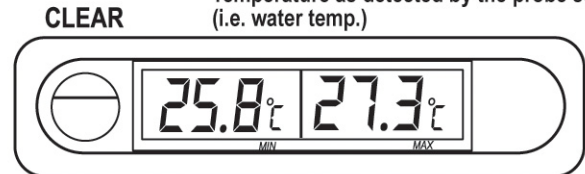

MAX-MIN MEMORY

OPERATING INSTRUCTIONS

 - 1) Temperature readouts will display after battery is inserted.
 - 2) Press MAX-MIN MEMORY button will display maximum and minimum, readouts of room temperature. Second press will display maximum and minimum readouts of water temperature. Third press, or after 8 seconds the display will show current temperature readout.
 - 3) If you press CLEAR after maximum or minimum temperature readout is recalled from the record, you will start a new memory record and the old one is erased.
- Maximum/Minimum temperature is the Highest/Lowest temperature readout as picked up from the accumulated temperature readouts. Thus you can specify, HOURLY, DAILY, WEEKLY, MONTHLY Room/Water max-min memory record by yourself.

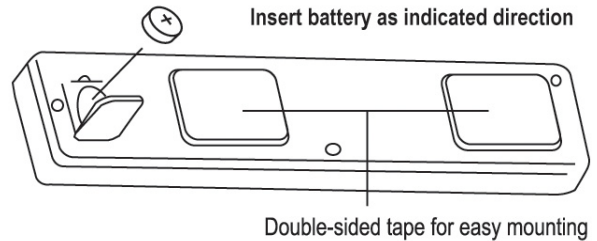

WARRANTY, SERVICE, OR RECALIBRATION

For warranty, service, or recalibration, contact:

CONTROL COMPANY

4455 Rex Road
Friendswood, Texas 77546 USA
Ph. 281-482-1714 Fax 281-482-9448
E-mail sales@control3.com
www.control3.com

Control Company is ISO 9001 Quality-Certified by DNV and ISO 17025 accredited as a Calibration Laboratory by A2LA.