TRACEABLE[®] WALKAWAY[™] REPEAT CONTROLLER INSTRUCTIONS

SPECIFICATIONS

Power:	120 VAC, 60 HZ, 3-pronged grounded plug
Switching Capability:	120 VAC, 60 Hz, 1800 watts, 15 amps,
	1/3 horsepower
Timing Accuracy:	0.01%
Timing Ranges:	Repeat ON/OFF – 1 hour to 99 hours (H)
	1 minute to 99 minutes (M)
	1 second to 99 seconds (S)
Display:	¹ / ₂ -inch (1.3 cm) LCD with backlighting
Size:	6 x 2¾ x 3¼ inches
Weight:	12 oz.
Case:	High-impact, ABS plastic
Cat. No.:	5058 – Traceable [®] Repeat Walkaway™ Controller

- **NOTE:** Remove clear plastic COVER by gently lifting one edge with a paper clip before programming unit. If there is a clear plastic film over face plate, remove and discard. Use COVER to protect against accidental setting changes during timings and to protect keys when unit is not in use.
- **NOTE:** Receptacle outlet on back of unit has power only during count up ON timing.

DIGITAL DISPLAY AND LIGHTS

- 1. Steady red light on case indicates controller is receiving power.
- 2. Flashing red lights indicates ON/OFF timing is in progress.
- HMS switch above red light sets timing hours H, minutes M, or seconds S.
- 4. Yellow PAUSE button pauses timing.
- 5. Blue START/STOP button starts/stops timing.
- 6. Blue buttons SET, 4/3, 2/1 set hours, minutes, or seconds for desired programmed time.
- 7. Blue RST button resets unit and returns display to 00.00.

LCD display is divided into four areas:

- A. Displays programmed ON time
- B. Displays elapsed count up ON time
- C. Displays programmed OFF time
- D. Displays elapsed count up OFF time

OPERATION

- 1. Plug unit into power source. Red light will turn on.
- 2. Plug desired equipment into receptacle outlet on back of unit.
- 3. Remove clear plastic cover by gently lifting one edge with a paper clip.
- 4. To return display to 00.00, gently press RST with a stylus or the end of a bent paper clip. Or, move HMS switch to another position and then back to desired setting. (Example: HMS switch is set at H. Move switch to M and then back to H. Display will return to 00.00.)
- Move HMS switch to desired time using a stylus or the end of a bent paper clip – hours (H appears on display), minutes (M appears on display), or seconds (S appears on display).
- 6. Press and hold SET button for three seconds. Display will flash.
- 7. Press 4 and 3 to set desired ON time. Press and hold button to advance setting rapidly.

- Press 2 and 1 to set desired OFF time. Press and hold button to advance setting rapidly. Press SET or PAUSE when desired programmed time is on the display. Or, wait 8 seconds until display stops flashing to lock in programmed time.
- 9. IMPORTANT NOTE: Both an ON *and* an OFF time MUST be set for the unit to function correctly.
- 10. Press START/STOP to begin timing. Red light will continue to flash during ON/OFF timing. Equipment only has power during ON timing.
- Bar "—" on display appears above ON when ON-timing is in progress. Bar "—" appears above OFF when OFF-timing is in progress.
- Unit will continue to repeat ON/OFF programmed timing. To stop timing, press START/STOP. Elapsed time returns to 00.00. Red light stops flashing and is continuously ON.
- Press and hold the buttons 1, 2, 3 and 4 simultaneously for 3 seconds to lock in a set time. A " will appear in the lower left-hand corner of the display. Repeat this step to unlock the set time.

NOTE: When the "**1** " is on the display, the set time cannot be changed, even by pressing the RST key.

TIME-OUT

Press PAUSE to stop timing. Press PAUSE again to resume timing. Any number of time-outs may be taken during a timing.

NOTE

Pressing START/STOP while time is running will stop timing and return count up display to 00.00.

NOTE

- 1. If electrical power is interrupted at any time, unit will turn OFF. Internal rechargeable battery will continue to light display.
- 2. During any interruption of electrical power, count up time elapsed will return to 00.00. Programmed time will remain on display.
- 3. After power is restored, to re-activate unit and re-start programmed ON/OFF timing, press START/STOP.

TROUBLESHOOTING: Make certain both an ON *and* an OFF time are programmed. Unit will not function with only an ON time programmed.

WARRANTY, SERVICE, OR RECALIBRATION

For warranty, service, or recalibration, contact:

CONTROL COMPANY

4455 Rex Road Friendswood, Texas 77546 USA Ph. 281-482-1714 Fax 281-482-9448 E-mail sales@control3.com www.control3.com

Control Company is ISO 9001 Quality-Certified by DNV and ISO 17025 accredited as a Calibration Laboratory by A2LA.

