


## INSTALLATION INSTRUCTIONS

### 1) Probe sensor:

Place the submersible probe inside the tank and press the suction cup against the inner wall.


Choose a position which is less affected by light or plant for more reliable readout.

### 2) Unit: Remove the protective paper of the double-sided tape and press the unit against any clean surface for mounting. Convenient position may be the outside wall of the tank.

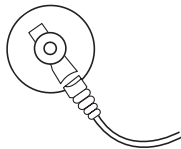

Temperature as detected by built-in sensor  
(i.e. room temp.)

Temperature as detected by the probe sensor  
(i.e. water temp.)

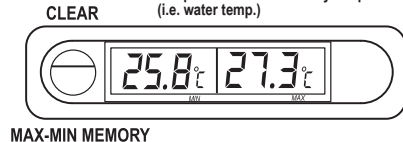


## OPERATING INSTRUCTIONS

1) Temperature readouts will display after battery is inserted.

2) Press MAX-MIN MEMORY button will display maximum and minimum, readouts of room temperature. Second press will display maximum and minimum readouts of water temperature. Third press, or after 8 seconds the display will show current temperature readout.

3) If you press CLEAR after maximum or minimum temperature readout is recalled from the record, you will start a new memory record and the old one is erased. Maximum/Minimum temperature is the Highest/Lowest temperature readout as picked up from the accumulated temperature readouts. Thus you can specify, HOURLY, DAILY, WEEKLY, MONTHLY Room/Water max-min memory record by yourself.

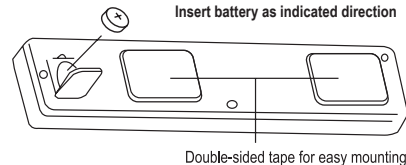

**WARRANTY, SERVICE, OR  
RECALIBRATION**

For warranty, service, or recalibration, contact:

**TRACEABLE® PRODUCTS**

12554 Old Galveston Rd. Suite B230

Webster, Texas 77598 USA

Ph. 281 482-1714 • Fax 281 482-9448

E-mail [support@traceable.com](mailto:support@traceable.com) • [www.traceable.com](http://www.traceable.com)

Traceable® Products is ISO 9001:2015 Quality-  
Certified by DNV and ISO/IEC 17025:2005  
accredited as a Calibration Laboratory by A2LA.

Cat. No. 4144 / 4145

Traceable® is a registered trademark of Cole-Parmer.

©2018 Traceable® Products. 92-4144-00 Rev. 3 070518

**TRACEABLE®  
STICK  
THERMOMETER  
INSTRUCTIONS**