-58 to 302°F Range:

SPECIFICATIONS

Accuracy:

Resolution: 0.1° ±2°F between -4 to 248°F otherwise ±4°F

OPERATION Press the ON/OFF button to turn the unit

- on. The unit will only read °F Fahrenheit.
- Insert the probe into the material to be
- measured and read the display. Press the ON/OFF button to turn the unit off. To conserve battery life, always turn

the unit off when not in use.

Press MAX/MIN to display maximum recorded reading.

MIN/MAX MEMORY

- Press MAX/MIN again to display the minimum record reading.
- Press MAX/MIN once more to return the display to current reading.
- Switch thermometer off then on to reset the memory reading to current reading.
- Reset the memory once before taking new maximum or minimum reading.

ALL OPERATIONAL DIFFICULTIES If this thermometer does not function properly

for any reason, replace the battery with a new high quality battery (see the "Battery Replacement" section). Low battery power can occasionally cause any number of "apparent" operational difficulties. Replacing the battery with a new fresh battery will solve most difficulties.

Erratic readings, a faint display, or no display

BATTERY REPLACEMENT

are all indicators that the battery must be replaced. To replace the battery, loosen the two screws at the rear of the case. Remove the face of the thermometer taking care not to disconnect the internal wiring. Replace exhausted battery with a new 1.5-volt, silver oxide, 389 size battery. Make certain positive (+) side is visible. Replace the face of the unit and tighten the screws. Do not over-tighten the screws as this may damage the unit.

NOTE: When replacing the face of the unit, care-

screws are tightened securely to maintain the unit's

fully ensure the back is properly in place and the

water-resistance

WARRANTY, SERVICE, OR RECALIBRATION

For warranty, service, or recalibration, contact:

TRACEABLE® PRODUCTS

12554 Old Galveston Rd. Suite B230 Webster, Texas 77598 USA Ph. 281 482-1714 • Fax 281 482-9448 E-mail support@traceable.com • www.traceable.com

Traceable® Products is ISO 9001:2008 Quality-Certified by DNV and ISO/IEC 17025:2005 accredited as a Calibration Laboratory by A2LA.

TRACEABLE® SHORT-STEM THERMOMETER INSTRUCTIONS