

## **SPECIFICATIONS**

Capacity: 9 hours, 59 minutes, 59 seconds, 99/100

Resolution: 1/100 second

## **MODE BUTTON**

Each press of the MODE button will cycle the display through the following timing modes: Split, Lap, and Countdown.

## **CLEARING THE DISPLAY TO ZERO**

If the stopwatch is running (indicated by running numbers and/or LAP or SPLIT flashing on the display), press the START/STOP button until STOP appears at the bottom of the display. Press the SPLIT/RESET button to clear the display to zero. The display will only clear to zero when the stopwatch has been stopped.

## **SINGLE ACTION TIMING**

1. Press the MODE button until SPLIT or LAP appears on the display.
2. Clear the display to zero.
3. The first press of the START/STOP button starts the timing.
4. The second press of START/STOP button stops timing.
5. After the time has been recorded, clear the display to zero.

## **TIME IN/TIME OUT TIMING**

1. Press the MODE button until SPLIT or LAP appears on the display.
2. Clear the display to zero.
3. The first press of the START/STOP button starts the timing.

4. The second press of the START/STOP button stops the timing. The stopwatch holds the reading where it was stopped (Time-Out).
5. The third press of the START/STOP button resumes timing from the point that it was stopped (Time-In).

Any number of Time-Outs may be taken, simply repeat steps 4 and 5 as often as needed.

6. Once timing is completed, clear the display to zero.

## **CONTINUOUS TIMING**

For timing which lasts over 10 hours, the stopwatch instantly rolls over to zero and continues timing.

## **CUMULATIVE SPLIT TIMING**

Cumulative Split Timing “freezes” the display for partial cumulative event times while the internal clock continues to run.

1. Press the MODE button until SPLIT appears on the display.
2. Clear the display to zero.
3. The first press of the START/STOP button starts the timing.
4. Pressing the SPLIT/RESET button “freezes” the display at the cumulative time while the internal clock continues to run. (SPLIT flashing on the display indicates the internal clock is running.)
5. Pressing the SPLIT/RESET button again will show the cumulative running time.

Any number of Splits may be taken, simply repeat steps 4 and 5 as often as needed.

6. At the end of the last event, press the START/STOP button to stop the timing.

## **LAP INTERVAL TIMING**

Lap Interval Timing yields a readout of each individual time increment of a connected series of events.

1. Press the MODE button until LAP appears on the display.
2. Clear the display to zero.
3. The first press of the START/STOP button starts the timing.
4. The first press of the SPLIT/RESET button “freezes” the display, automatically resets the timer to zero and starts timing the next interval. (SPLIT flashing on the display indicates the internal clock is running.)
5. Each additional press of the SPLIT/RESET button “freezes” the display and shows the new updated lap interval time.

Any number of Lap Intervals may be taken, simply repeat steps 4 and 5 as often as needed.

6. At the end of the last event, press the START/STOP button to stop the timing.

## **COUNTDOWN ALARM TIMING**

1. Press the MODE button until COUNTDOWN appears on the display.
2. Clear the display to zero.
3. Press and hold the MODE button for 3 seconds (hours will begin to flash).
4. Press the START/STOP button to set the desired number of hours, then press the SPLIT/RESET button (minutes will begin to flash)<sup>1</sup>.

5. Press the START/STOP button to set the desired number of minutes, then press the SPLIT/RESET button (seconds will begin to flash)<sup>1</sup>.
6. Press the START/STOP button to set the desired number of seconds, then press the SPLIT/RESET button (the countdown time will be set)<sup>1</sup>.

<sup>1</sup>Once the desired time is on the display, the MODE button may be pressed to exit the setting mode and set the countdown time.

7. If the wrong time has been entered, repeat steps 3-6 to set the desired countdown time.
8. With the desired time on the display, press the START/STOP button to begin countdown timing.

During the countdown process, the timer may be paused by pressing the START/STOP button and restarted by pressing the START/STOP button.

If the programmed countdown time is 30 seconds or greater, the stopwatch will sound a warning beep every second once 5 seconds remains, the timer will then sound a continuous tone for the final second before zero is reached.

If the programmed countdown time is 30 seconds or less, the timer will sound 2 beeps just before zero is reached.

9. Once reaching zero, the stopwatch will begin counting up. To stop the count-up timing, press the START/STOP button.

## **COUNTDOWN MEMORY**

The memory function will allow a countdown time to be

recalled multiple times without having to re-enter the countdown time. The stopwatch will return to the desired countdown time again and again.

1. Follow the steps in the "Countdown Alarm Timing" section.
2. Once the stopwatch reaches zero and the count-up timing has been stopped, press the SPLIT/RESET button to recall the original programmed time.
3. Press the START/STOP button again to begin counting down.

#### **CLEARING THE COUNTDOWN MEMORY**

To clear the countdown time, while in the Countdown mode, press and hold the MODE button for 3 seconds until the hours begin to flash. Press the MODE button again to exit the setting mode. The countdown time will be set to zero.

#### **ALL OPERATIONAL DIFFICULTIES**

If this stopwatch does not function properly for any reason, replace the battery with a new high quality battery (see "Battery Replacement" section). Low battery power can occasionally cause any number of "apparent" operational difficulties. Replacing the battery with a new fresh battery will solve most difficulties.

#### **BATTERY REPLACEMENT**

A faint display, incorrect display, or no display are all indicators that the battery must be replaced. To replace the battery, remove the screws on the back of the unit. Remove the back. Remove the exhausted battery and replace it with a new 1.5-volt Silver Oxide 357 size battery. Make certain the new battery is installed with the positive side visible. Replace the back of the unit making certain that the o-ring seal is properly seated in the back of the unit. Replace the screws and tighten securely.

#### **WARRANTY, SERVICE, OR RECALIBRATION**

For warranty, service, or recalibration, contact:

#### **TRACEABLE® PRODUCTS**

12554 Old Galveston Rd. Suite B230

Webster, Texas 77598 USA

Ph. 281 482-1714 • Fax 281 482-9448

E-mail [support@traceable.com](mailto:support@traceable.com) • [www.traceable.com](http://www.traceable.com)

Traceable® Products is ISO 9001:2018 Quality-Certified by DNV and ISO/IEC 17025:2017 accredited as a Calibration Laboratory by A2LA.

Cat. No. 1030

Traceable® is a registered trademark of Cole-Parmer.

©2018 Traceable® Products. 92-1030-00 Rev. 4 040220

# **TRACEABLE® DIGITAL STOPWATCH INSTRUCTIONS**