 


OPERATING INSTRUCTIONS

Normal display shows inside and outside temp in 1/10 degree.



1. One point temp control

 
a. High Temp Alert “▲”

— Slide switch to temp “Alert” position, press “Alert Select” to select High Temp Alert “▲” mode.


- Press “Hi Set” to set desired High Temp Alert.
- Press “Alert On/Off” to turn on the High Temp Alert. (“Alert” flag appears on display.)
- Alarms and LCD flashes 5 sec every one min when the sensed temp is higher than the set temp.

b. Low Temp Alert “▼”

- Slide switch to temp “Alert” position, press “Alert Select” to select Low Temp Alert “▼” mode.
 - Press “Lo set” to set desired Low Temp Alert.
 - Press “Alert On/Off” to turn on the Low Temp Alert. (Alert flag appears on display.)
 - Alarms and LCD flashes 5 sec every one mm when the sensed temp is lower than the set temp.



 FITTING THE OUTSIDE SENSOR: LOCATE OUTSIDE SENSOR AWAY FROM DIRECT SUNLIGHT AND HEAVY SATURATION.




2. Two point temp control

a. Inside Temp Alert “⌘”

— Slide switch to temp “Alert” position, press “Alert Select” to select Inside Temp Alert “⌘” mode.

 - Press “Hi set” to set the desired upper temp alert value.
- Press “Lo set” to set the desired lower temp alert value.
- Press “Alert on/off” to turn, on the Inside Temp Alert. (“Alert” flag appears on display).
- Alarms and LED flashes 5 sec every one mm when the sensed temp is within the set temp.



b. Outside Temp Alert “◆”

— Slide switch to temp “Alert” position, press “Alert select” to select Outside Temp Alert “◆” mode.
— Press “Hi set” to set the desired upper temp alert value.


- Press “Lo set” to set the desired lower temp alert value.
- Press “Alert on/off” to turn on the Outside Temp Alert. (“Alert” flag appears on display)
- Alarms and LED flashes 5 sec every one mm when the sensed temp is outside the set temp.

3. Slide switch to “Temp” position after setting temp alert.

4. Alert off

Press “Alert on/off” in temp “Alert” position, “Alert” flag disappears on display.


BATTERY REPLACEMENT:

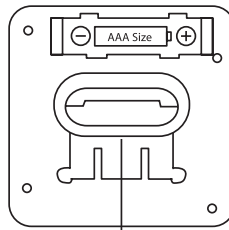

Folding stand for counter top display

- 1 Pc “AAA” or “UM4” battery
- Insert the battery as direction indicated.

Use fingernail to lift up battery cover and insert battery as to indicated direction.

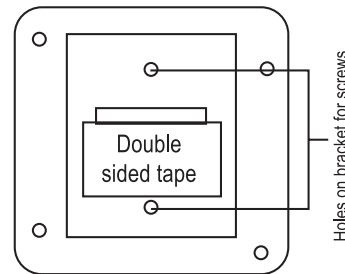

EASY MOUNTING OF BRACKET ON WALL BY:

- Double-sided tape or
- Screws

**WARRANTY, SERVICE, OR
RECALIBRATION**

For warranty, service, or recalibration, contact:

TRACEABLE® PRODUCTS

12554 Old Galveston Rd. Suite B230
Webster, Texas 77598 USA

Ph. 281 482-1714 • Fax 281 482-9448

E-mail support@traceable.com • www.traceable.com

Traceable® Products are ISO 9001:2018 Quality-
Certified by DNV and ISO/IEC 17025:2017
accredited as a Calibration Laboratory by A2LA.

Cat. No. 4142 / 4143

Traceable® is a registered trademark of Cole-Parmer.

©2018 Traceable® Products. 92-4142-00 Rev. 3 061118

**TRACEABLE®
BIG-DIGIT
4-ALERT ALARM
THERMOMETER
INSTRUCTIONS**