


## (A) - (G): "Function" Display

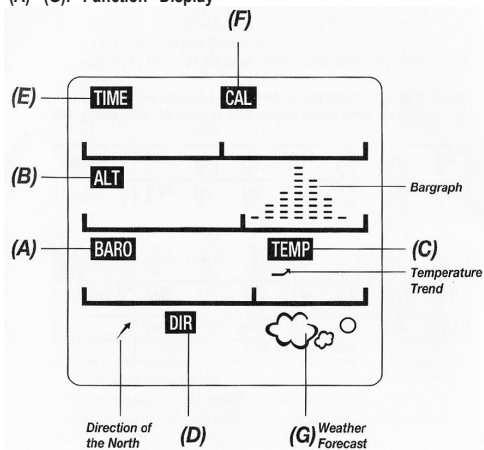

## SPECIFICATION

### Air Pressure

Pressure Range: 300 to 1100 mb (hPa); 8.85 to 32.45 inHg  
Resolution: 1 mb/hPa; 0.01 inHg  
Sensing Time: 15 minutes

### Altitude

Altitude Range: -700 to 9000 m; -2296 to 29520 ft  
Resolution: 0.1 m for -500.0 m to 999.9 m; otherwise 1 m  
Sensing time: 2 sec (Sensing time under sleep mode is 15 minutes)

### Temperature

Temperature range: -10 to 60°C or 14 to 140°F  
Resolution: 0.1°C or 0.1°F  
Sensing Time: 1 min

### Direction

Range: 0-359°  
Resolution: 1°  
Sensing time: 1 sec for 1 min  
Unit: whole circle bearing, e.g. 255° (or compass bearing e.g. S75°W (=255°))

## OPERATION

1. Press **"ON/OFF"** button to switch on. In normal mode, display shows reading of:

- pressure: in unit of mb (mbar) (or inHg).
- height: shows in unit of m (meter) (or ft).
- temperature: shows in unit of °C (or °F).
- direction: shows in whole circle bearing, e.g. 255° (or compass bearing e.g. S75°W (=255°)).
- time: shows and starts time at 12 hour format e.g. 12:00am (or 24 hour format).
- calendar: shows in d/m with day (or m/d).
- bar graph
- weather forecast: show in graphic icon

To operate under scope of above i to viii, press **"mode"** to switch as following:

- "BARO", "ALT", "TEMP", "DIR", "TIME" and "CAL"
- "BARO", "ALT", "TEMP", "TIME" and "CAL"

2. Press and hold **"on/off"** for 3 seconds to switch off.

### A. PRESSURE

To look for **BARO** information:

1. Press **"mode"** to pressure mode.

**BARO** appears, Bar graph for pressure trend of previous 12 hours shows.

Press **"mode"** again to exit and switch to **"ALT"** mode.

2. BARO mode includes following functions:

- Real-time pressure reading in mb (hPa) or inHg.
  - Pressure trend reading (past 12 hours readings)
- To switch between (a) and (b), press "+" and "-" together

3. Air pressure unit switchable

- Go to (2a)
- Press together **"set"** and "+" to switch between mb (hPa) and inHg.

4. Pressure Trend (past 12 hours reading)

- Go to (2b). Display will show one pressure reading for previous past hour with **"- 1 hr"** next to reading.
- Press "+" or "-" to check record of reading in other hours within past 12 hours.

### B. ALTITUDE

1. Press **"mode"** to altimeter mode.

**ALT** appears, Bar graph for altimeter trend of previous 12 hours shows. Press **"mode"** again to exit and switch to **"TEMP"** mode.

2. ALT mode includes functions:

- Real time altimeter reading in meters or feet
  - Max/min altimeter memory recalling
  - Altimeter Trend (past 12 hours reading)
  - High/low altimeter alarm
  - Current ascent/descent rate in ft/hr or m/hr
  - Ascent/descent differential altitude ▲, ▲H; ▼, ▲H
  - Accumulative ascent/descent altitude Σ+, ▲ or Σ+, ▼
- To switch between (a) and (g), press "+" and "-" together

3. Altitude unit switchable

- Go to (2a).
- Press together **"set"** and "+" to switch between m or ft.

4. Setting a reference altitude

Altimeter uses pressure sensor to detect current air pressure, which is then used to estimate current altitude. Unit is pre-programmed with preset values, which are

used to convert air pressure reading to altitude values. If a reference altitude is used, unit will calculate relative altitude based on reference altitude (not preset value).

After a reference altitude is set, unit adjusts air-pressure-to-altitude conversion calculation accordingly. Altitude measurements calculated is subjected to error caused by change in air pressure. Therefore, updating reference altitude whenever one is recommended.

- Go to (2a)
- Press and hold **"set"**, **"OFF"** displays, which representing reference altitude is not in use.
- Press "+" or "-" to turn on the reference altitude setting and **"On"** display.
- Press **"set"** to confirm, real time altitude flashing.
- Press "+" once to increase one digit or press and hold "+" for acceleration of increments.
- Press "-" once to decrease one digit or press and hold "-" for acceleration of increments.
- Press **"set"** to confirm and real time altitude change to the preset reference altitude.
- If no reference altitude is set and turn off, the unit uses the preset value for altitude calculation.

5. Switch on/off altitude measurement

User can switch off measurement of altitude.

- Go to (2a), Press **"set"** and "-" to switch off measurement of altitude.
- Display reads "----" It stops measurement of altitude.
- When measurement is stopped, unit keeps updating altitude for every 15 minutes (same as pressure measurement).
- Press **"set"** and "-" together in (2a) to switch on measurement again. Display reads real time reading immediately and update every second immediately.
- Should measurement is switched off, unit will still convert altitude by pressure value in every 15 minutes and bar graph will also be updated accordingly.
- Should measurement be switched off, other value in (2a) to (2g) will keep as last reading.

6. Altitude max/min memory recalling

- Go to (2b), display shows maximum reading.
- Press "+" to show maximum altitude tested. **"MAX"** shows on display.
- To clear memory, in (6ii), press and hold **"set"** reading reset memory to 0 (a beep sound) and start to record maximum reading.
- Press "-" to show minimum altitude tested. **"MIN"** shows on display.
- To clear memory, in (6iv), press and hold **"set"** reading reset memory to 0 (a beep sound) and start to record maximum reading.
- Press "+" and "-" together to (2c).

7. Altitude Trend (past 12 hours reading)

- Go to (2c). Display will show one altimeter reading for previous past hour with **"- 1hr"** next to reading.
- Press "+" or "-" to check record of reading in other hours within past 12 hours.

8. High/low altimeter alarm

- Go to (2d), display shows flashes **"AL"**.
- Press and hold "+" to set and check high alarm, **"AL"**

and, **"HI"** flashes. -700m or previous reading shows on display; or

- Press and hold "-" to set and check low alarm, **"AL"** and, **"LOW"** flashes. -700m or previous reading shows on display.
- To set alarm, Press "+" or "-" to set desired alarm setting. -700m+ 9000m+ -700m, each press 10th, continue press 100th.
- Press and hold **"set"** to confirm and display returns to (2a) real time reading and shows **"HI"** or **"LOW"**
- When reading reaches alarm setting, alarm beep turns on for 15 times. **"HI"** or **"LOW"** flashing.
- Press any key to stop alarm and **"HI"** or **"LOW"** stops flashing; or it stops automatically after 15 times.
- To delete high alarm setting, press **"set"** and "+" in (2d) to delete high alarm set, **"HI"** disappear; or
- To delete low alarm setting, press **"set"** and "-" in (2d) to delete low alarm set, **"LOW"** disappear.
- Press "+" and "-" to exit and switch to (2e).

9. Current ascent/descent rate


 



- Go to (2e), display shows current ascent rate. **"▲"** shows on display.
- Press "-" to show current descent rate. **"▼"** shows on display.
- Press "+" and "-" together to return to (21).

10. Ascent/descent differential altitude

- Go to (21), display shows ascent differential altitude reading. **"▲ H"** and **"▲"** shows on display.
- Press "+" to show ascent differential altitude reading. **"▲ H"** and **"▲"** shows on display.
- To clear memory, in (10ii), press and hold **"set"**, reading reset to 0 and start to record ascent differential altitude reading.
- Press "-" to show descent differential altitude reading. **"▲ H"** and **"▼"** shows on the display.
- To clear memory, in (10iv), press and hold **"set"** the reading reset to 0 and start to record the descent differential altitude reading.
- Press "+" and "-" together to switch (2g).




11. Accumulative ascent/descent altitude

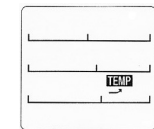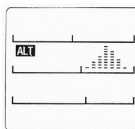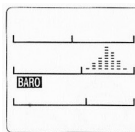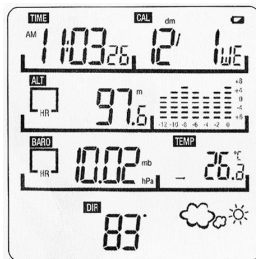- Go to (2g), display shows the accumulative ascent altitude reading. **"E"** and **"▲"** shows on display.
- Press "+" to show accumulative ascent altitude tested. **"E"** and **"▲"** shows on display.
- To clear memory, in (11ii), press and hold **"set"** reading reset to 0 and start to record accumulative ascent altitude tested.
- Press "-" to show accumulative descent altitude tested. **"E"** and **"▲"** shows on display.
- To Clear memory, in (11iv), press and hold **"set"** reading reset to 0 and start to record maximum reading.
- Press "+" and "-" together to return to (2a).



### C. TEMPERATURE

#### To look for TEMP information:

 
- Press "mode" to TEMP mode. **TEMP** appears. Press "mode" again to exit and switch to "DIR" (or "TIME") mode.
- TEMP mode includes following functions:
  - Real-time temperature reading; and
  - Temperature trend; An arrow shows on display representing the temperature is:
    - rising; or 
    - steady; or 
    - down going 
- °C/°F switchable
  - Go to (2a)
  - Press together "set" and "+" to switch between °C and °F.
- Temperature max/min memory recalling
  - Go to (2a)
  - Press "+" to show maximum temperature tested. "MAX" shows on display.
  - Press "-" to show minimum temperature tested. "MIN" shows on display.



### D. DIRECTION

#### To look for Compass Information:


- Press "mode" to DIR mode. **DIR** appears. Press again to exit and switch to "TIME" mode.
- DIR mode includes following functions:
  - Real time direction reading in whole circle bearing or compass bearing
  - Calibration function
- Type of bearing switchable
  - Press "set" and "+" to switch between different types of bearing.
- Calibration
  - In "DIR" mode, Press and hold "set". "CAL" appears.
  - Turn the unit for 360 degree horizontally.
  - Press and hold "set" to confirm and exit to real-time compass.
- Sleep mode
  - When unit is in compass mode, it starts to measure and update direction every second for 1 minute.
  - Afterward the display read "--".
  - In compass mode, press "set" to reactivate unit to measure and update the direction every second for 1 minute; or
  - Press "mode" to exit and re-enter to DIR mode again.



### E. TIME

#### To look for TIME information:

- Press "mode" to TIME mode. **TIME** shows on the display. Press "mode" again to exit and switch to "CAL" mode.
- TIME mode includes following function:
  - Real time clock
  - Alarm time setting (▲ shows on the display)
  - Timer (count up and count down); ▼ shows on the display

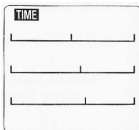

To switch between (a) to (c) one by one, in TIME mode press together "+" and "-" for each switching.

- 12/24 switchable
  - Go to (2a),
  - Press together the "set" and "+" to switch between 12/24 time format.
- Clock Set
  - Go to (2a), press and hold "set". Hour digits flash.
  - Press "+" or "-" to set hour digits. Press "set" to confirm. Minute digits flash.
  - Press "+" or "-" to set minute digits. Press and hold "set" to confirm and go back to real time mode. Second digits return to 00.
- Alarm and Snooze On/Off
  - Go to (2b), press and hold "set" to get into the alarm mode. Hour digits flash.
  - Press "+" or "-" to set hour digits. Press "set" to confirm. Minute digits flash.
  - Press "+" or "-" to set minute digits. Press and hold "set" to confirm.
  - When time is reached, ▲ flashes and beeping sound of alarm will last for 1 minute. Press any key to stop the alarm.
  - To get into the alarm with snooze mode, press "set" again, both ▲ & Z' flashes.
  - When time is reached, ▲ flashed and stop it by pressing any key. While Z' starts flashing. Snooze will sound for every 5 minutes and repeat for 5 times.
  - Press "set" to cancel both function mode ▲ & Z'.
  - Press "+" and "-" to return to the real time mode.
- Timer Set (23:59:59) Go to (2c), ▼ flashes. Time digits "0:00:00" show on the display.
- Count up
  - Press "mode" to start count up.
  - Press "mode" to pause/stop and re-start.
  - Press together "+" and "-" to go to other time mode during counting while ▼ flashes during counting.
- Countdown
  - Press and hold "set". Hour digits flash. Press "+" or "-" to set hour digit. Press "set" to confirm.
  - Minute digits flash. Press "+" or "-" to set minute. Press "set" to confirm.
  - Second digits flash. Press "+" or "-" to set second. Press "set" to confirm.
  - When setting is confirmed, all digits stop flashing and all are set well.
  - When all digits are set well. Press "mode" to start count down.
  - Press "mode" to pause and re-start.
  - During counting, may press together "+" and "-" to go to other time function and ▼ flashes during count down.
  - When time is reached, it sounds for 1 minute and digit remain "0:00:00". Or press any key to stop beeping when time is reached.
  - Press "mode", last setting will display. Simply press "mode" again to start count down again.




- Timer clear
  - In timer ▼ mode, press "mode" to pause counting. Then press "set" to clear. Timer digits return to "0:00:00"

### F. CALENDAR

#### To look for CALENDAR information:

- Press "mode" to CAL mode. **CAL** will appear.
- CAL mode includes:
  - date and month showing (dim or mid) with day
  - year showing (2000-2059)

To switch between (a) and (b), press "+" and "-" together.
- Switchable d/m or m/d
  - Go to (2a), press together "set" and "+" to switch between "d/m" or "m/d".
- Language for Day and Calendar set
  - Go to (2a), "d/m" or "m/d" shows.
  - Press and hold "set", display shows "E" representing English for day
  - Press "+" or "-" to select the language. Display show as following:  
"E" → "D" → "F" → "I" → "S" → "E"  
You can select E for English, D for German, F for French, I for Italian or S for Spanish. They are shown in the language chart below.

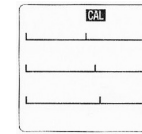

Language	Day-of-the-week						
	Mon	Tues	Wed	Thur	Fri	Sat	Sun
English	E	Mo	Tu	We	Th	Fr	Sa Su
German	D	Mo	Di	Mi	Do	Fr	Sa So
French	F	Lu	Ma	Me	Je	Ve	Sa Di
Italian	I	Lu	Ma	Me	Gi	Ve	Sa Do
Spanish	S	Lu	Ma	Mi	Ju	Vi	Sa Do


- Press "set" to confirm and month digits flash first. Press "+" or "-" to set month. Press "set" to confirm. Then date digits flash.
- Press "+" or "-" to set date. Press and hold "set" to confirm and go back to real time mode.
- Go to (2b). "yr" shows and 4 places digit shows also.
- Press and hold "set", the last 2 digits of year flash (the first 2 digits "20" will not flash). Press "+" or "-" to set year from "00" to "59".
- Press and hold "set" to confirm and go back to real time mode.

### G. WEATHER FORECAST

#### To look for Weather forecast

(It will be shown on the display by all time. Includes icons of the following.)

- sunny ☀
- partly cloudy ☁ ☀
- cloudy ☁
- rainy ☔
- thunder storm ⚡
- moon and star ★ \* ○

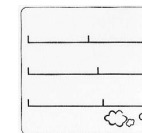

## TRACEABLE® HAND HELD DIGITAL BAROMETER INSTRUCTIONS

### BACKLIGHT

- Press "B/L" to turn on the back light.
- Press again to switch off. Or it will turn off automatically after 10 seconds.

### BATTERY REPLACEMENT

Turn unit over. Use a coin or similar opener to open cover. Insert a new batteries (2 x 3 volts "CR2032" size or equivalent) as the direction indicated. Close the cover.

### WARRANTY, SERVICE, OR RECALIBRATION

For warranty, service, or recalibration, contact:

### TRACEABLE® PRODUCTS

12554 Old Galveston Rd. Suite B230  
Webster, Texas 77598 USA  
Ph. 281 482-1714 • Fax 281 482-9448  
E-mail support@traceable.com  
www.traceable.com

Traceable® Products is ISO 9001:2018 Quality-Certified by DNV and ISO/IEC 17025:2017 accredited as a Calibration Laboratory by A2LA.

Cat. No. 4198

Traceable® is a registered trademark of Cole-Parmer.

©2020 Traceable® Products. 92-4198-00 Rev. 3 050520