

**WARRANTY, SERVICE, OR RECALIBRATION**

For warranty, service, or recalibration, contact:

**TRACEABLE® PRODUCTS**  
12554 Old Galveston Rd. Suite B230  
Webster, Texas 77598 USA  
Ph. 281 482-1714 • Fax 281 482-9448  
E-mail [support@traceable.com](mailto:support@traceable.com) • [www.traceable.com](http://www.traceable.com)

Traceable® Products is ISO 9001:2018 Quality-Certified by DNV and ISO/IEC 17025:2017  
accredited as a Calibration Laboratory by A2LA.

**TRACEABLE®  
MEMORY CARD  
THERMOMETER  
INSTRUCTIONS**

## SPECIFICATIONS

### Temperature—

**Range:** Ambient 32.0 to 122.0 °F / 0.0 to 50.0 °C  
Probe -22.0 to 158.0 °F / -30.0 to 70.0 °C

**Resolution:** 0.1°

### Humidity—

**Range:** 0.0 to 99.0% RH

**Resolution:** 0.1%

**Display Update:** 10 seconds


**Memory Card:** Up to 2GB SD / Up to 4GB SDHC

**Data Logging:** 1 minute to 720 minute user selectable interval

### Probe Supplied—

**Model 6400:** Supplied with a bottle probe. Designed for use in refrigerators and freezers, bottle probes are filled with a nontoxic glycol solution that is GRAS (Generally Recognized As Safe) by the FDA (Food and Drug Administration) eliminating concerns about incidental contact with food or drinking water. The solution filled bottle simulates the temperature of other stored liquids. Hook and loop tape and a magnetic strip are provided to mount the bottle to the inside of a refrigerator/freezer. The probe cable permits refrigerator/freezer doors to close on it. (**Do not immerse bottle probe in liquid**).

**Model 6401:** Supplied with a standard stainless steel immersion probe with cable. Designed for use in air, liquids, and semi-solids, the sensor and cable may be completely immersed.

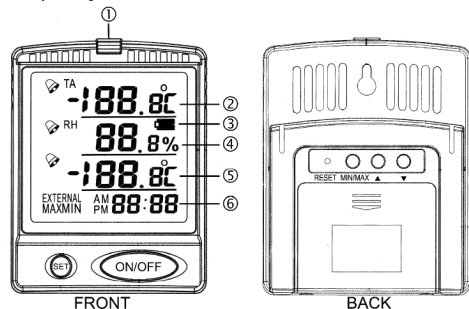

- ① LED visual alarm indicator
- ② Ambient Temperature (TA)
- ③ Battery status indicator
- ④ Ambient Relative Humidity
- ⑤ External Probe Temperature
- ⑥ Time-of-day clock (data logger messages will also alternate here)

### AC POWER SUPPLY/BATTERY POWER


The meter may be powered the following ways:

#### Batteries only

Typical operating time when using the three (3) each AA alkaline batteries only:

Up to 1 year in display mode only, no data logging, no alarms.

Up to 1 month with data logging on at a 1 minute recording rate, with no alarms. Higher capacity memory cards require more power to operate; therefore, larger cards will exhaust the batteries more rapidly.

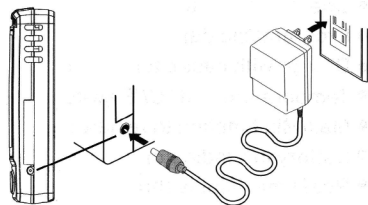

#### AC power supply only

If the AC power supply is being used without batteries, in the event of a power outage, the meter will turn off and data logging will stop.

#### AC power supply and batteries together

Using the AC power supply and batteries together allows the batteries to act as a backup power supply in the event of a power outage.

When using the AC power supply and batteries together, the batteries will need to be replaced periodically to insure they have sufficient power to operate the meter during a power outage (see the "Battery Replacement" section).

### DISPLAY MESSAGES

The following messages may appear alternating in place of the time-of-day clock:

- Sd** Indicates that an SD memory card is inserted; however, data logging is turned off.
- rEc** Indicates that an SD memory card is inserted and data logging is turned on.
- FuLL** Indicates that the SD memory card is full and data logging is off (no records may be written to a full SD memory card)
- Err & Sd** Indicates that the SD memory card was removed while data logging was turned on, the meter is no longer recording data.

### SETTING TIME-OF-DAY/DATE

1. Turn the meter on by pressing ON/OFF button.
2. Press and hold the SET and ▼ buttons simultaneously for 3 seconds to enter the time-of-day/date setting mode (12H or 24H will flash on the display).

The file created is a fixed width data file that may be read utilizing any computer application capable of reading ".TXT" files (Word®, Excel®, NotePad, WordPad, etc).

The text file is structured as follows:

Header	Column Position
DATE (YYYY-MM-DD).....	1-10
TIME (HH:MM:SS).....	12-20
Tair (?) <sup>1</sup> (ambient temperature).....	21-27
RH(%) (ambient relative humidity) .....	28-34
Text (?) <sup>1</sup> (external/probe temperature) .....	35-44

<sup>1</sup>This will show either F or C depending on the value that was selected to be displayed on the meter when data logging was started.

### READING THE DATA FILE(S) FROM THE SD CARD

1. Remove the SD memory card from the meter (see the "Inserting/Removing SD Memory Card" section).
2. Insert the SD memory card into the supplied USB SD card reader. (If the computer being used has a built-in SD card reader, the USB card reader is not required.)
3. Plug the USB SD card reader into an available USB port on the computer. The first time the USB card reader is plugged in to the computer, drivers will automatically be installed to allow the card reader to function.
4. Browse to the SD card and select the file(s) to view.
5. Open the file(s) in the desired program (Word®, Excel®, NotePad, WordPad, etc).

To open from Excel®, example:

**File**→**Open**→**All Files (\*.\*)**→*locate and select the file*→**Open**→**Fixed Width**→**Next**→*place column breaks at 10, 20, 27, 34, and 44*→**Finish**

### PLACEMENT/MOUNTING OPTIONS

**Bench Stand** - The meter is supplied with a bench stand that is a part of the back of the meter. To use the bench stand, locate the small opening at the corners on the back of the meter. Place your fingernail into the opening and flip the stand out. To close the stand, simply snap it shut.

**Wall Mount** - Set a screw into the wall at the location desired. The head of the screw will need to slip into the receptacle on the back of the meter, do not set the screw flush to the wall. Once the screw has been set properly, hang the meter in place by sliding the receptacle on the back of the meter over the head of the screw.

**Magnet** - A magnet is supplied with the meter. Peel the protective paper off the adhesive tape on the

magnet. Press the magnet onto the back of the thermometer and mount on any metal surface.

**Hook & Loop** - Self adhesive hook and loop mounting tape is supplied with the meter. Peel off the protective backing. Adhere one piece to the meter and the other to any clean, flat surface.

### ALL OPERATION DIFFICULTIES


If this meter does not function properly for any reason, replace the batteries with new, high-quality alkaline batteries (see the "Battery Replacement" section). Low battery power can occasionally cause a number of "apparent" operational difficulties. Replacing the batteries with new fresh batteries will solve most difficulties.

### ERROR CODES

- E02** Indicates that the value being measured is below the measurement range of the meter (too low).
- E03** Indicates that the value being measured is above the measurement range of the meter (too high).
- E04** Indicates that the temperature sensor has been damaged.
- E11** Indicates that the humidity sensor has been damaged.

**E32/E33** Indicates that the meter has been damaged.

### BATTERY REPLACEMENT

An erratic display, faint display, no display, or  appearing on the display are all indicators that the batteries need replacement.

If the AC power supply is not being used when the batteries are being replaced, the meter will turn off once the batteries have been removed. The meter and data logging will need to be turned back on once the batteries have been replaced.

If the AC power supply is being used when the batteries are being replaced, the meter will continue to function without interruption.

Remove the battery cover located on the back of the meter. Remove the exhausted batteries and replace them with three (3) new AA alkaline batteries. Make certain to insert the new batteries with the proper polarity as indicated by the illustration in the battery compartment. Replace the battery cover.

For monitoring overnight or on weekends:

1. Prior to leaving for the night or weekend, record the following into the manual log:
  - Current Date and Time
  - Current Readings
  - Minimum Readings
  - Maximum Readings
2. Once the above items have been manually recorded, clear the memory.
3. First thing upon returning from overnight or the weekend, record following into manual log:
  - Current Date and Time
  - Current Readings
  - Minimum Readings
  - Maximum Readings

By following the above procedure, the minimum and maximum memory will provide a record of the minimum and maximum readings that have been achieved over that time period. The memory allows the user to see if any readings went outside of an acceptable range.

 

## ALARMS

Independent High/Low alarms may be set for all readings (ambient temperature, relative humidity and probe temperature). Temperature alarm limits may be set in 0.1° increments. Relative humidity alarm limits may be set in 0.1% RH increments.

Each High/Low alarm limit may be independently enabled/disabled allowing selecting of high alarm only, low alarm only, or both high and low alarm monitoring.

## SETTING HIGH/LOW ALARM LIMITS

While setting the High/Low alarm limits, if no alarm limit is desired for the value being displayed, press the MIN/MAX button, "--." will appear on the display indicating the alarm for the value is disabled.

Once a high and/or low alarm value has been set for a reading, the alarm will be enabled.  appearing to the left of the display value indicates that an alarm is enabled for that reading. Each readings High/Low alarm limit may be independently enabled/disabled allowing the selection of high alarm only, low alarm only, or both high and low alarm monitoring.  appearing will indicate that either a high alarm, low alarm or both high and low alarms are enabled for that reading.

1. Press and hold the SET button for 3 seconds, release the SET button when "SET" appears at the bottom right side of the display in place of the time-of-day.

2. The low alarm limit for the ambient temperature will appear. The alarm value and "Lo" will flash on the display.
3. Press the ▼ or ▲ button to increment the display to the desired low alarm value.
4. Press the SET button. The high alarm limit for the ambient temperature will appear. The alarm value and "Hi" will flash on the display.
5. Press the ▼ or ▲ button to increment the display to the desired high alarm value.
6. Press the SET button. The low alarm limit for the ambient relative humidity will appear. The alarm value and "Lo" will flash on the display.
7. Press the ▼ or ▲ button to increment the display to the desired low alarm value.
8. Press the SET button. The high alarm limit for the ambient relative humidity will appear. The alarm value and "Hi" will flash on the display.
9. Press the ▼ or ▲ button to increment the display to the desired high alarm value.
10. Press the SET button. The low alarm limit for the probe temperature will appear. The alarm value and "Lo" will flash on the display.
11. Press the ▼ or ▲ button to increment the display to the desired low alarm value.
12. Press the SET button. The high alarm limit for the probe temperature will appear. The alarm value and "Hi" will be flashing on the display.
13. Press the ▼ or ▲ button to increment the display to the desired high alarm value.
14. Press the SET button. The data logging rate will flash on the display (see the "Adjusting Data Logger Recording Rate" section).
15. Press the SET button to return to the current temperature/humidity display.

## VIEWING HIGH/LOW ALARM LIMITS

Once alarm limits have been set, follow the steps in the "Setting High/Low Alarm Limits" section to view the values that have been set. If no changes are desired, do not press the ▼ or ▲ buttons, simply press the SET button to move to the next value.

## DISABLE/ENABLE HIGH/LOW ALARM LIMITS

Once alarm limits have been set, follow the steps in the "Setting High/Low Alarm Limits" section to view the values that have been set. Press the SET button

to cycle through the values that have been set.


 
An alarm limit may be disabled while being displayed by pressing the MIN/MAX button, "--." will appear on the display indicating the alarm for the value is disabled. When an alarm value is disabled, the alarm value previously set will be cleared.

To enable an alarm that has been disabled, while viewing the disabled alarm ("--."), press the ▼ or ▲ button to increment the value to the desired alarm value. With an alarm value selected ("--." no longer appearing), the alarm will be enabled.

Each High/Low alarm limit may be independently enabled/disabled allowing selecting of high alarm only, low alarm only, or both high and low alarm monitoring.


## ALARM SOUNDING

With an alarm enabled, when a reading being measured is outside the alarm limit that has been set (equal to or lower than the low alarm set point, or equal to or greater than the high alarm set point):

 will flash on the display next to the measurement that is alarming (ambient temperature, ambient relative humidity or probe temperature).  will continue to flash next to the measurement.

The red LED will flash continuously for the first 10 seconds, and will then flash every 10 seconds until the measured value returns to an in-range condition or user acknowledges the alarm.

The audible alarm will sound continuously for the first 10 seconds, and will then sound every 10 seconds until the measured value returns to an in-range condition or user acknowledges the alarm.

While alarming, the sound may be turned off by pressing the SET button ("Off" will appear on the display), **it is not recommended to turn off the alarm sound**. This will turn off the alarm sound and no audible alarms will sound while the alarm sound is turned off. The alarm sound may only be turned back on by reaching and alarm condition and pressing the SET button to turn the sound back on; therefore, **it is not recommended to turn off the alarm sound**. The flashing  and red LED alarm are not affected by this setting.

## DATA LOGGER

The built-in data logger is capable of utilizing SD (2GB maximum) and SDHC (4GB maximum) memory cards.

The sampling rate for the data logger may be set to record readings from every 1 minute to every 720 minutes in 1 minute increments. A 1 minute interval will record 1440 readings/day. A 720 minute interval will record 2 readings/day.


## SD CARD SELECTION

The supplied 256MB SD memory card is ready for immediate use. When utilizing 3rd party SD/SDHC cards, insure that they are formatted as FAT16 or FAT32, NTFS format is not supported. SD cards up to 2GB and SDHC cards up to 4GB are supported. Cards over 4GB and MMC/SDXC cards are not supported.

The supplied 256MB SD card is capable of storing 5.9 million readings (over 10 years of readings at 1 minute intervals).

Higher capacity memory cards require more power to operate; therefore, larger cards will exhaust the batteries more rapidly (see the "AC Power Supply/ Battery Power" section).

## INSERTING/REMOVING SD MEMORY CARD

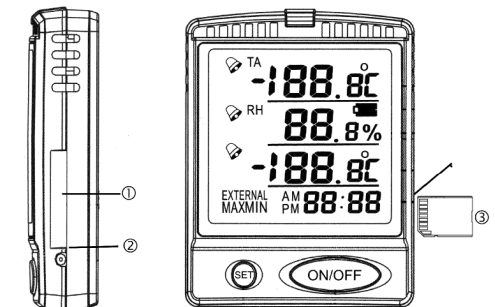

- ① SD card door
- ② Lift up here to open SD card door
- ③ Proper SD memory card orientation for inserting

## To remove the SD memory card:

1. Turn off data logging (see the "Turning On/Off Data Logging" section).
2. Turn the meter off, by pressing the ON/OFF button.
3. Open SD card door by lifting up on bottom of door.
4. Push SD memory card until it "clicks", then release to allow the card to be ejected.

### To insert the SD memory card:

1. Turn the meter off, by pressing the ON/OFF button.
2. Open the SD card door by lifting up on the bottom of the door.
3. Make certain that the SD memory card is oriented properly (see image) and insert by pushing the card until it “clicks”.
4. Close the SD card door by snapping it shut.
5. Turn the meter on by pressing the ON/OFF button.
6. Turn data logging on, if desired (see the “Turning On/Off Data Logging” section).

### ADJUSTING DATA LOGGER RECORDING RATE

The sampling rate for the data logger may be set to record readings from every 1 minute to every 720 minutes in 1 minute increments. A 1 minute interval will record 1440 readings/day. A 720 minute interval will record 2 readings/day.

1. Press and hold the SET button for 3 seconds, release the SET button when “SET” appears at bottom right side of the display in place of clock.
2. The low alarm limit for the ambient temperature will appear.
3. Press the SET button six (6) times to pass through the alarm set-points, **rAtE** should appear on the display.
4. Number flashing is data logger recording interval (expressed in minutes). Press ▼ or ▲ button to increment the display to desired value.
5. With the desired value on the display, press the SET button to return to the current temperature/humidity display.

### TURNING ON/OFF DATA LOGGING

Prior to starting data logging:

Make certain that the time-of-day and date have been set properly (see the “Setting Time-of-Day/Date” section). The recorded data will be time/date stamped using the time-of-day/date setting.

Make certain that an SD/SDHC memory card is inserted into the meter (see the “Inserting/Removing SD Memory Card” section).

Set the desired °F/°C display mode (see the “Displaying °F or °C” section).

Set desired data logger recording rate (see the “Adjusting Data Logger Recording Rate” section).

To toggle data logging On/Off, press and hold the SET button for 6 seconds (each time this is performed, it will toggle from on/off and from off/on):

**Off rEc** indicates that the data logging function is off.  
**ON rEc** indicates that the data logging function is on.

While data logging is occurring, the clock section will alternate between displaying the time and **rEc**.

**If the meter is turned off, the data logging will also be turned off. When the meter is turned on, data logging must be turned back on by using the above procedure.**

If the SD card is removed while data logging is turned on, **Err** and **Sd** will alternate on the display in place of the clock to indicate that the meter is no longer recording data. Insert the SD card to return to data logging.

#### Following will cause data logging to stop/turn off:

- Turning the meter off
- Low battery power (☐), when using batteries only
- Power failure, when using the AC power supply only
- Removing the SD memory card
- Changing the time-of-day/date
- Changing the data logger recording rate
- Changing the High/Low alarm settings
- Changing display from °F/°C, °C/°F
- Pressing the RESET button

**Once data logging has been stopped, it must be turned back on.**

#### DATA LOGGING FILE FORMAT/STRUCTURE

With data logging turned on (see the “Turning On/Off Data Logging” section), the meter will write a file to the SD memory card. The file created is a standard text (.TXT) file.

Once data logging has started, the filename created is based on the start date (month and day number) and time.

Example: Start 11/28/2013 at 16:48, will create a file with the name “11281648.TXT”.

The maximum size per file is 30,000 records. During continuous data logging, once the maximum file size has been reached, a new file is automatically created utilizing the same file naming method. A file containing 30,000 records represents over 20 days of minute by minute data. Depending on the selected data logger recording rate and the duration, continuous data logging may generate numerous files containing data.

3. Press the ▼ or ▲ button to select 12 or 24 hour time format.
4. Press the SET button, the year will flash.
5. Press the ▼ or ▲ button to increment the display to the correct value. This is the last 2 digits of the year.  
Example: 2013 is displayed as 13.
6. Press the SET button, the month will flash.
7. Press the ▼ or ▲ button to increment the display to the correct value.
8. Press the SET button, the day number will flash.
9. Press the ▼ or ▲ button to increment the display to the correct value.
10. Press the SET button, the time-of-day hours will flash.
11. Press the ▼ or ▲ button to increment the display to the correct value.
12. Press the SET button, the time-of-day minutes will flash.
13. Press the ▼ or ▲ button to increment the display to the correct value.
14. Press the SET button, the display will return to the current temperature/relative humidity display.

#### DISPLAYING °F OR °C

With the meter turned on, to toggle the display between reading Fahrenheit or Celsius, press and hold the ▲ button for 3 seconds.

When using the data logging function, the temperature values recorded will match the selected display unit (°F or °C).

#### MINIMUM AND MAXIMUM MEMORY

There are six points that are automatically recorded into memory:

- *Minimum Ambient Temperature Achieved*
- *Maximum Ambient Temperature Achieved*
- *Minimum Ambient Relative Humidity Achieved*
- *Maximum Ambient Relative Humidity Achieved*
- *Minimum Probe Temperature Achieved*
- *Maximum Probe Temperature Achieved*

**Minimum and maximum memories are NOT programmable.** The minimum value recorded into memory is the minimum reading achieved since the last time the memory was cleared. The maximum value recorded into memory is the maximum reading achieved since the last time the memory was cleared. The minimum and maximum memories are maintained

over the period since the memory was last cleared.

#### VIEWING MINIMUM/MAXIMUM MEMORY

Press the MIN/MAX button, the display will show “MIN” at the bottom left side of the display indicating that the minimum memory values are being displayed.

Press the MIN/MAX button a second time, the display will show “MAX” at the bottom left side of the display indicating that the maximum memory values are being displayed.

Press the MIN/MAX button a third time to return to the current temperature/humidity display (MIN/MAX will no longer appear on the display).

#### CLEARING THE MINIMUM/MAXIMUM MEMORIES

Clearing the Minimum/Maximum memories will set both the minimum and maximum values for all readings to the current display readings.

The meter does not have to be in the Min/Max memory display mode to clear the minimum/maximum memories.

To clear the minimum and maximum memories, press and hold the MIN/MAX button for 3 seconds, all of the LCD segments will appear on the display for approximately 3 seconds indicating that the minimum and maximum memories have been cleared.

**The minimum and maximum memories are also cleared when the meter is turned off.**

#### EXAMPLE - USING THE MEMORY TO MONITOR A REFRIGERATOR/FREEZER

Following is a simple example of how to use the Min/Max memory to monitor the temperature inside a refrigerator or freezer. This example is provided only as a helpful guide and is not intended to replace existing facility requirements or procedures.

With meter installed and monitoring desired location, keep a notebook or spreadsheet as a manual log.

1. At the same time every day, record the following into the manual log:
  - Current Date and Time
  - Current Readings
  - Minimum Readings
  - Maximum Readings
2. Once the above items have been manually recorded, clear the memory.

By clearing memory each day, minimum and maximum memory will provide a record of minimum and maximum readings that have been achieved over past 24 hour monitoring period. Memory allows user to see if any readings went outside of an acceptable range.