

SPECIFICATIONS

 
Range: 14.0 to 230.0 °F / -10.0 to 110.0 °C



Resolution: 0.1°

Display Update Rate: 10 seconds





OPERATION

1. Attach the probe and secure the connection by tightening. The connector and plug are keyed. Make certain that the plug is inserted correctly, do not insert the plug incorrectly and force it.



2. Press the  button to turn the unit on.
3. Insert the probe into the material to be measured and read the display.
4. Press the  button to turn the unit off. To conserve battery life, always turn the unit off when not in use.


SELECTING °F OR °C

1. Press the  button to turn the unit off.
2. Press and hold the  button for 8 seconds.
3. Continue to press the  button when the display shows a reading. The display will alternate between showing the temperature in °F and °C.
4. Release the  button once the desired measurement unit is displayed.

PROBE USE

The probe is supplied with a holder and ferrel. The ferrel may be tightened so that while using with the holder the probe may be set at the desired depth.


The probe and cable are waterproof; however, for extended measurement periods, do not leave the probe handle and cable submerged. Utilize the holder and ferrel for extended measurement.

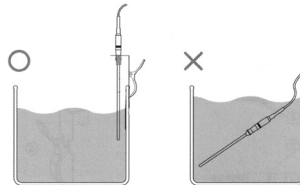

DISPLAY MESSAGES

- E 0 2** Indicates that the temperature being measured is below the measurement range of the thermometer or that the probe and/or cable has been damaged.
- E 0 3** Indicates that the temperature being measured is above the measurement range of the thermometer or that the probe and/or cable has been damaged.
- E 3 1** Indicates that the electronics have been damaged.

 
WALL MOUNT HANGER



ALL OPERATIONAL DIFFICULTIES

If this thermometer does not function properly for any reason, replace the batteries with new high quality batteries (see the "Battery Replacement" section). Low battery power can occasionally cause any number of "apparent" operational difficulties. Replacing the batteries with new fresh batteries will solve most difficulties.

BATTERY REPLACEMENT

Erratic readings, a faint display, no display or  appearing on the display are all indications that the batteries must be replaced. Remove the battery cover by removing the six battery cover screws. Remove the exhausted batteries and replace them with 4 new AAA Alkaline batteries. Make certain to install the new batteries in the directions indicated in the battery compartment (improper battery placement may cause damage to the electronics). Replace battery cover and tighten the 6 screws securely.

WARRANTY, SERVICE, OR RECALIBRATION

For warranty, service, or recalibration, contact:

TRACEABLE® PRODUCTS

12554 Old Galveston Rd. Suite B230

Webster, Texas 77598 USA

Ph. 281 482-1714 • Fax 281 482-9448

E-mail support@traceable.com

www.traceable.com

Traceable® Products are ISO 9001:2018 Quality-Certified by DNV and ISO/IEC 17025:2017 accredited as a Calibration Laboratory by A2LA.

Cat. No. 6406

Traceable® is a registered trademark of Cole-Parmer.

©2020 Traceable® Products. 92-6406-00 Rev. 3 071620

**TRACEABLE®
EXTRA-LONG
PROBE
WATERPROOF
THERMOMETER
INSTRUCTIONS**