

## Traceable® 4-Channel Timer



Start/Stop All button

 
Channel/Clock Clear timer setting button

Seconds button

Minutes button


Hours button

Battery

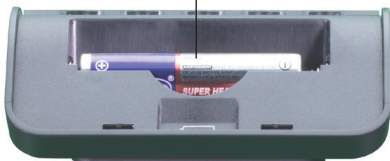

## INITIAL SETUP

 - 1 Remove battery cover and insert batteries.

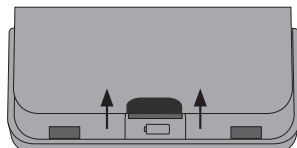


- 2 Replace battery cover.


- 3 Press CH/CLOCK button until clock appears on top row of display.



 
- 4 Hold CH/CLOCK until there is an audible beep and the time flashes.

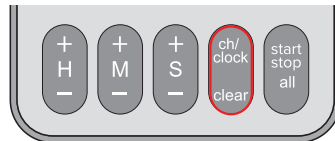

 - 5 To adjust 12/24 hour clock, press and hold START/STOP ALL button.

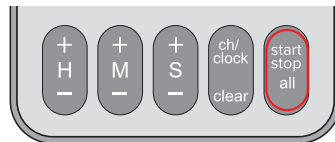

 
- 6 Use H/M/S buttons to adjust the time.

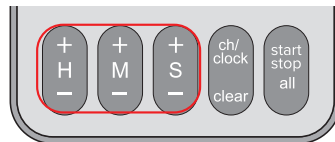

- 7 Pressing Seconds button will round to the nearest minute.

- 8 Press the CH/CLOCK button to exit setup.


## SETTING A TIMER

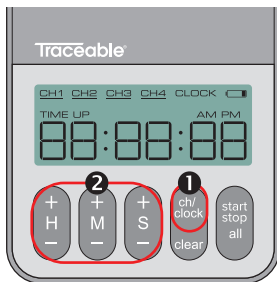 

1. Press CH/CLOCK button until the desired channel is solid (not flashing) on the screen.
2. Use the H/M/S buttons to configure timer.

**Note:** To clear and start over, press CLEAR button.

## STARTING A TIMER

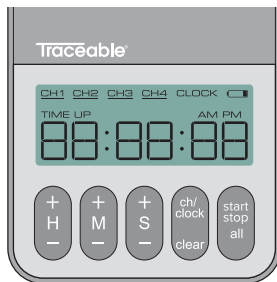 

- When starting/stopping an individual timer, navigate to that timing channel using the CH/CLOCK button and then press START/STOP ALL.
- To start/stop all timers, press the START/STOP ALL button from the clock screen.
- Timers which are counting down will flash quickly.
- Timers which are counting up will flash slowly.
- Timers which have expired will flash rapidly.

## WARRANTY, SERVICE, OR RECALIBRATION

**Traceable**<sup>®</sup>  
an antylia scientific company

12554 Old Galveston Rd. Suite B230  
Webster, Texas 77598 USA  
Ph. 281-482-1714 • Fax 281-482-9448  
support@traceable.com  
traceable.com

Traceable<sup>®</sup> Products are ISO 9001:2018 Quality-Certified by DNV and ISO/IEC 17025:2017 accredited as a Calibration Laboratory by A2LA.

Item No. 56000-16

Model No. 5667

©2022 1065T9\_M\_92-5667-00 Rev. 0 09022022

# Traceable<sup>®</sup> 4-Channel Timer Quick-Start Guide

