### SPECIFICATIONS Range: -58 to 572°F (-50 to 300°C)

±1.0°C between -20 and 100°C

±0.5°C between -20 and 100°C

at tested points, ±1°C otherwise

Cat. No. 4038 and 4039

Ultra<sup>™</sup> thermometers are tested at selected test

points to be within tighter than normal tolerances

to assist in providing improved accuracy. Other

points will not necessarily fall within the same ac-

curacy as those found at the selected test points.

Cat. No. 4339

ULTRA™ THERMOMETER ACCURACY

but will be within an accuracy of ±1 °C.

Accuracy:

Resolution: 0.1° from -20° to 200°, 1° otherwise

within 3 seconds, to view the maximum temperature reached since activating the unit.

MAX/MIN MEMORY

"MAX" appears on the display to indicate the maximum temperature recorded. **Note:** Three seconds after pressing the MAX/MIN button.

the unit automatically returns to the current temperature

1. To view the minimum temperature reached

the minimum temperature recorded.

2. Press the MAX/MIN button a second time.

since activating the unit, press the MAX/MIN

button. "MIN" appears on the display to indicate

reading. ("MIN" and "MAX" are no longer displayed.)

3. Turn the unit off to reset the minimum and maximum memories.

Press the ON/OFF button to turn the unit on.

OPERATION

## Press the °F/°C button to switch between Fahrenheit and Celsius. Insert the probe into the material to be measured and read the display. Press the ON/OFF button to turn the unit off. To conserve battery life, always turn the unit off when not in use.

### ALL OPERATIONAL DIFFICULTIES If this thermometer does not function properly for

any reason, replace the battery with a new high quality battery (see the "Battery Replacement" section). Low battery power can occasionally cause any number of "apparent" operational difficulties. Replacing the battery with a new fresh battery will solve most difficulties.

### **BATTERY REPLACEMENT**

Erratic readings, a faint display, no display or papearing on the display are all indications that the battery must be replaced. Using a coin, turn the battery cover on back of the unit in the direction of the "open" arrow. Remove the exhausted battery and replace with a new CR2032 button cell battery. Make certain positive (+) side is visible. Replace battery cover.

# WARRANTY, SERVICE, OR RECALIBRATION For warranty, service, or recalibration, contact:

## TRACEABLE® PRODUCTS 12554 Old Galveston Rd. Suite B230

Webster, Texas 77598 USA
Ph. 281 482-1714 • Fax 281 482-9448
E-mail support@traceable.com
www.traceable.com

Traceable® Products are ISO 9001:2015 Quality-Certified by DNV and ISO/IEC 17025:2017 accredited as a Calibration Laboratory by A2LA.

Cat. No. 4038 / 4039 / 4339

Traceable<sup>®</sup> and Ultra™ are registered trademarks/trademarks of Cole-Parmer.

©2022 Traceable® Products, 92-4038-00 Rev. 9 071124

TRACEABLE®
WATERRESISTANT
THERMOMETER
WITH
PROBE/CABLE
INSTRUCTIONS