

## FEATURES

- Base - 7" diameter, 7lb.
- 35 watt bright Halogen white light
- Clamping unit for vertical or horizontal Positioning
- Switch in cord
- Flexible-Arm™ articulates at 3 points
- Fingertip bar for raising, lowering and pivoting with ease
- Spring counterbalance for stability
- Vented shade with rolled edges
- Safety-glass with UV filter

## BASE ASSEMBLY (see Figure 1)

1. Remove "Screw I" from base "Stem II".
2. Insert the lamp frame into base "Stem II", align screw holes.
3. Screw in "Screw I" and finger tighten.

## CLAMPING UNIT ASSEMBLY

1. Insert the lamp frame into hole in top of clamp assembly.

2. Loosen clamp with lever on bottom of assembly.
3. Position clamping mechanism and tighten firmly using lever on bottom of assembly.

## BULB REPLACEMENT (see Figure 2)

1. Turn off lamp and allow shade and accessories to cool.
2. Turn the lamp shade upward.
3. Remove CENTER screw (using a Phillips screwdriver) and clip from protective glass cover.
4. Pull out failed bulb and replace with halogen bulb.
5. Replace protective glass and clip and screw in place.

NOTE: Do not remove screws holding fingertip bar in place.

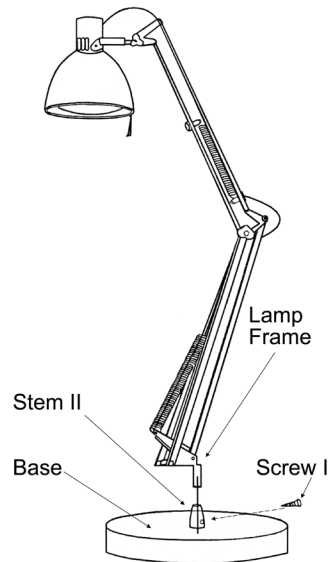


Figure 1.

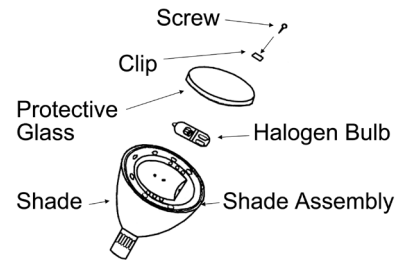


Figure 2.

**WARRANTY, OR SERVICE**

For warranty or service, contact:

**TRACEABLE® PRODUCTS**

12554 Old Galveston Rd. Suite B230

Webster, Texas 77598 USA

Ph. 281 482-1714 • Fax 281 482-9448

E-mail [support@traceable.com](mailto:support@traceable.com) • [www.traceable.com](http://www.traceable.com)

Traceable® Products are ISO 9001:2018 Quality-

Certified by DNV and ISO/IEC 17025:2017

accredited as a Calibration Laboratory by A2LA.

**FLEXIBLE-ARM™**

**LIGHT**

**INSTRUCTIONS**